

INSTALLATION

PLEASE READ THESE INSTRUCTIONS CAREFULLY, AND BE SURE YOU UNDERSTAND
WHAT YOU ARE DOING BEFORE INSTALLING YOUR NEW FIXTURE


IMPORTANT WARNING: FIRE HAZARD/ELECTRICAL SHOCK HAZARD EXISTS!

1. This fixture is intended for installation in accordance with the National Electrical Code and all applicable local and state building codes. The final installation must be approved by the appropriate, qualified building inspector(s).
2. This fixture should only be installed by qualified personnel; improper installation may result in FIRE HAZARD and/or ELECTRICAL SHOCK HAZARD! You must comply with all building codes.
3. Risker Fire Warning: Most dwellings built before 1985 have supply (i.e. house) wire rated 60c. Consult a qualified electrician before installing.

MOUNTING INSTRUCTIONS

1. Turn off power at circuit breaker of fuse box before beginning any installation for safety reasons; fire hazard and electrical shock.
2. Mount the cross bar (4) to the ceiling outlet box (15) using the outlet box screws (3).
3. Attach chains (6) to loops (9) on top of bar, thread wire (10) through every 2nd or 3rd loop, attach chains to ceiling canopy (5), pull wire through loop in canopy.
4. Push canopy slightly over screws (12) enough to replace nuts (11) on screws (12).
5. Connect fixture Wire (10) to house wires; this fixture uses a parallel wire with a smooth or round side, while the other side has either a square side or flat side ribbed (i.e. rough) side. The best method used to determine this difference is to view the two sides of the wire from the end, or you may choose to feel the sides or the wire. After you have determined the proper side of the wire, connect them to the house wires as follows: The smooth side connects to the black house wire (14) while the rough or ribbed side connects to the white side (1) using wire connectors (2). Also at this time connect the ground wires together and to the ceiling outlet box.
6. Caution: Be certain no bare wire strands are exposed outside of wire connectors.
7. Push connected wires into the ceiling outlet box and push canopy to ceiling and tighten knobs until tight against ceiling.
8. This fixture is intended to be hung by two (2) chains. The proper number of chains and wires must be used.
9. This fixture is designed to be hung at least 12 inches below the ceiling.

883-BRZ

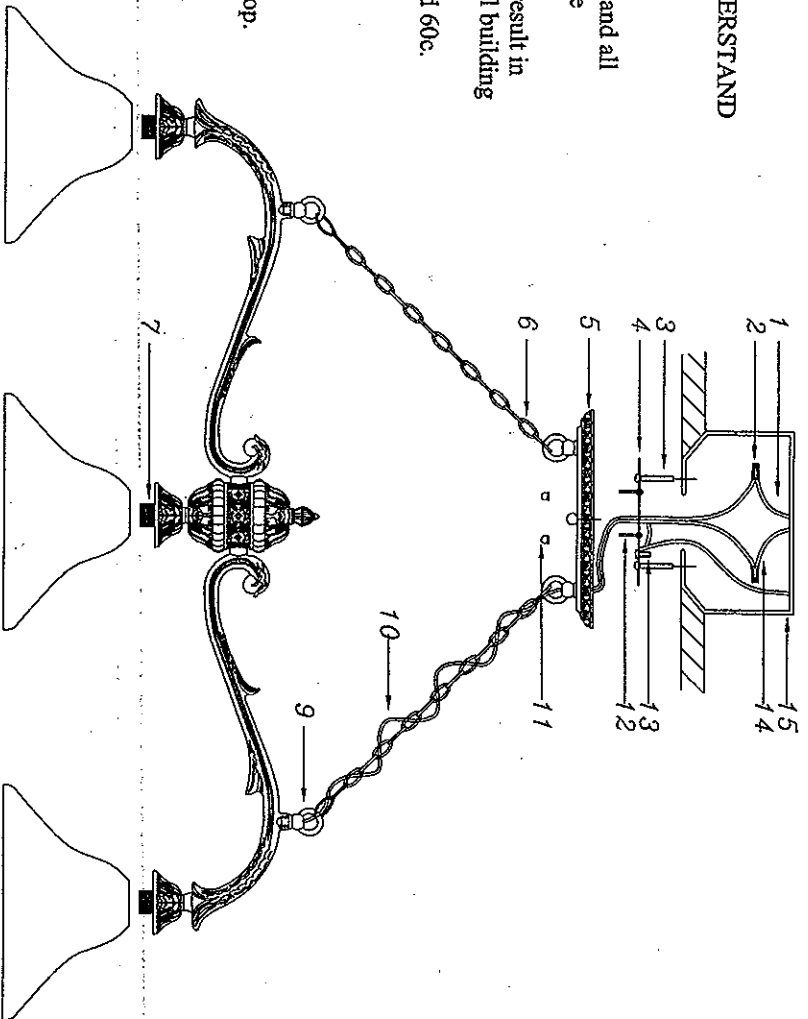

PARTS LIST:

- | | |
|----------------------|-----------------------|
| 1 white supply wire | 2 wire connectors |
| 3 outlet box screws | 4 crossbar |
| 6 chain | 7 socket |
| 9 loop | 10 fixture wire |
| 12 screws | 13 green ground screw |
| 14 black supply wire | 15 outlet box |
| | 5 canopy |
| | 8 shade ring |
| | 11 nut |