

WALL SCONCE FIXTURE INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.


GENERAL

All electrical connections must be in accordance with local and National Electrical Code(N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. Mark the location of the two key holes with a pencil. Drill a small hole at each mark and push the plastic anchors into the wall using a hammer until flush with the wall.
2. Fasten the bracket plate to the outlet box using two Mounting screws, and tightly screw two wood screws through the key hole of the bracket plate into the plastic anchors of the wall.
3. Make wire connections:
 - Twist together the white wire from the fixture with the white wire from outlet box. Cover with wire connector
 - Twist together the black wire from the fixture with the black wire from outlet box. Cover with wire connector
 - Attach the ground wire to the cross bar with a green ground screw.
4. Place the Back plate against the Outlet box, secure with the Stem Screw.
5. Install bulbs. (Please do not exceed the maximum capacity which is recommended on the sockets).
6. Put the glass onto the socket, then use the nut screw it tightly.

INSTALLATION IS NOW COMPLETED.

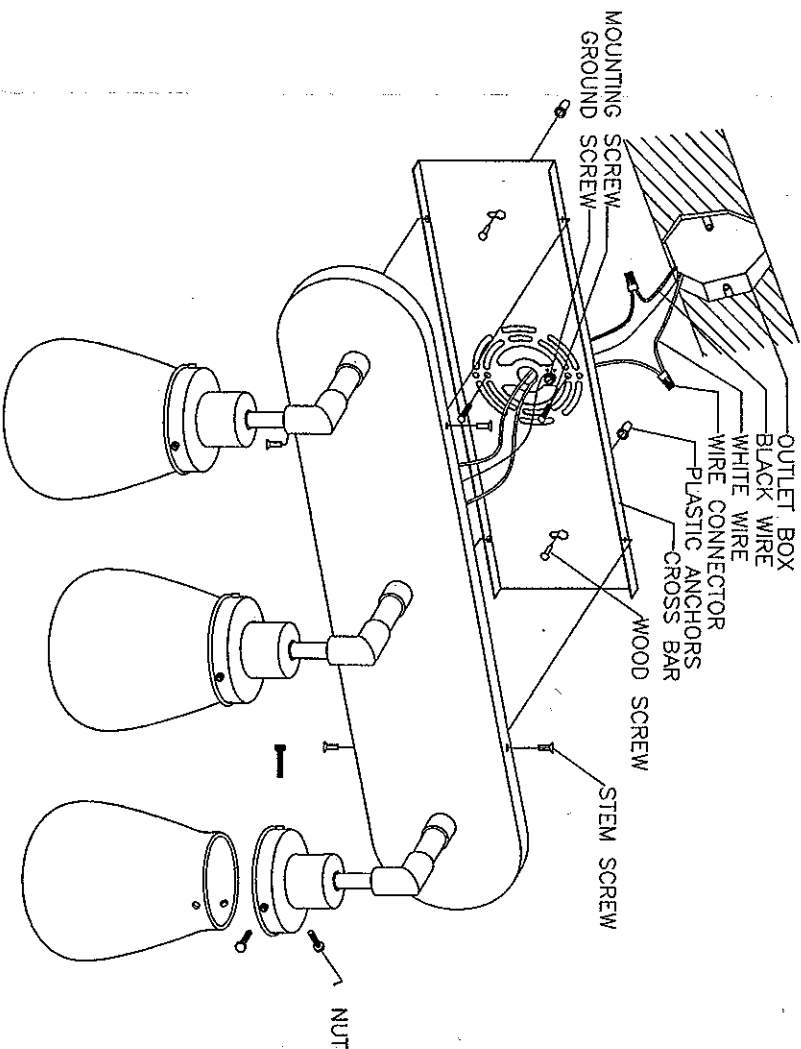

ITEM NO: 1233-BN-471, 1233-CH-471, 1233-DG-471

1234-BN-471, 1234-CH-471, 1234-DG-471