

# ASSEMBLY AND INSTALLATION INSTRUCTIONS FOR ITEM #1321MBBN

## WARNING


TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE:** Should any difficulty be experienced, please consult a qualified electrician before installing.

### Installation steps:

1. Turn off the electricity at the Fuse or Circuit Breaker before installation.
2. Attach the Round Bar to the Outlet Box by using 2PCS of Long Mounting Screw-2 upwards.
3. Decide the amount of Rod sections needed for the desired height and attached those Rod sections together, then run the wire from the fixture through the Rod sections and Connector into the Canopy, attached one end of Rod section to the Connector and the other end to the Swivel.
4. Make wire connections with Wire Connectors:
  - Connect the Wire (W/ marking) from the light to the Black Wire from the Outlet Box.
  - Connect the Wire (W/O marking) from the light to the White Wire from the Outlet Box.
  - Attached the Ground Wire and House Ground Wire to the Cross Bar with a Green Screw.

Carefully tuck wires back into the Outlet Box.
5. Attached the Canopy to the Round Bar and secure with the Fixing Nuts to the Short Mounting Screw-1.
6. Install Bulb. (Bulb is not included, please do not exceed the maximum capacity which is recommended on the Socket Cover.)
7. Turn on the power at Fuse or Circuit Box and enjoy your new fixture.

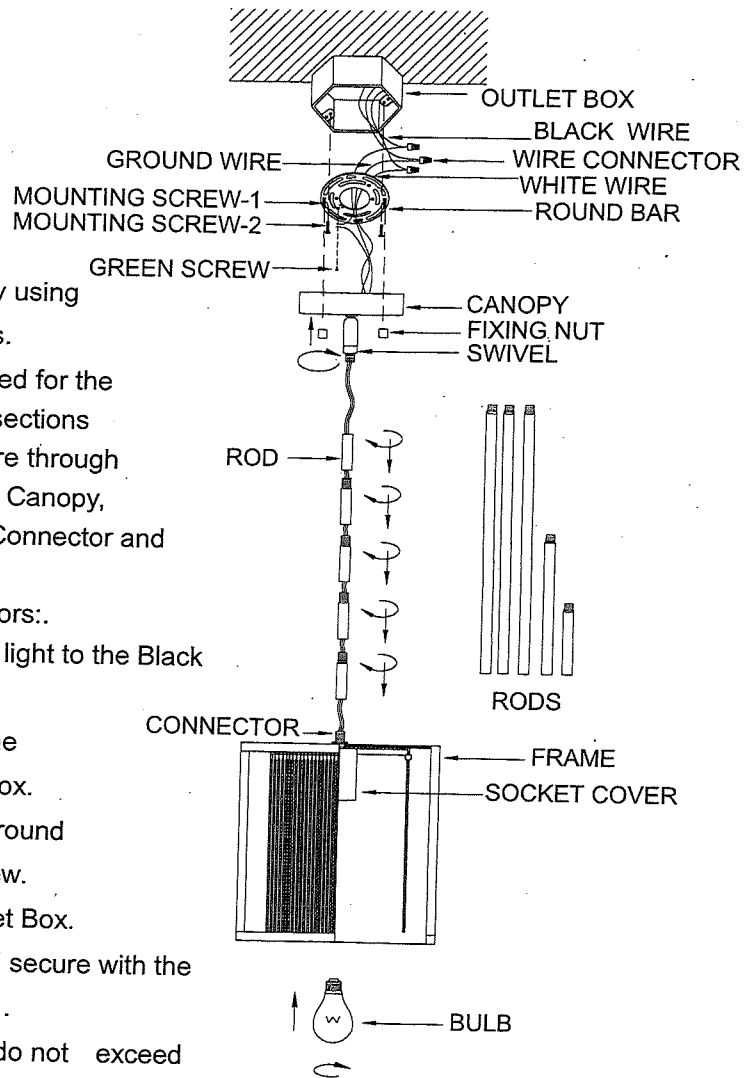

# TOLTEC

- LIGHTING -