

ASSEMBLY AND INSTALLATION INSTRUCTIONS FOR ITEM #1335MBBN


WARNING

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Should any difficulty be experienced, please consult a qualified electrician before installing.

Installation steps:

1. Turn off the electricity at the Fuse or Circuit Breaker before installation.
2. Drilling to holes into the Ceiling, and strike the two Red plastic screws into the two holes.
3. Thread Mounting Screws-2 into the Long Bar. Secure the Long bar to the outlet box with the Mounting Screws-2.
4. Attached the Self-drilling Screws to the Red Plastic Screws through the Long Bar.
5. Decide the amount of Rod sections needed for the desired height and attached those Rod sections together, then run the wire from the fixture through the Rod sections and Connector into the Canopy, Attached one end of Rod section to the Connector and the other end to the Swivel.
6. Attached the Canopy to the Swivel and fix by Fixing Nuts.
7. Make wire connections with Wire Connectors:
 - Connect the Wire (W/ marking) from the light to the Black Wire from the Outlet Box.
 - Connect the Wire (W/O marking) from the light to the White Wire from the Outlet Box.
 - Attached the Ground Wire and House Ground Wire to the Cross Bar with a Green Screw. Carefully tuck wires back into the Outlet Box.
8. Attached the Canopy to the Long Bar and secure with the Fixing Nuts to the Mounting Screw-1.
9. Install Bulbs. (Bulbs are not included, please do not exceed the maximum capacity which is recommended on the Socket Cover.)
10. Turn on the power at Fuse or Circuit Box and enjoy your new fixture.

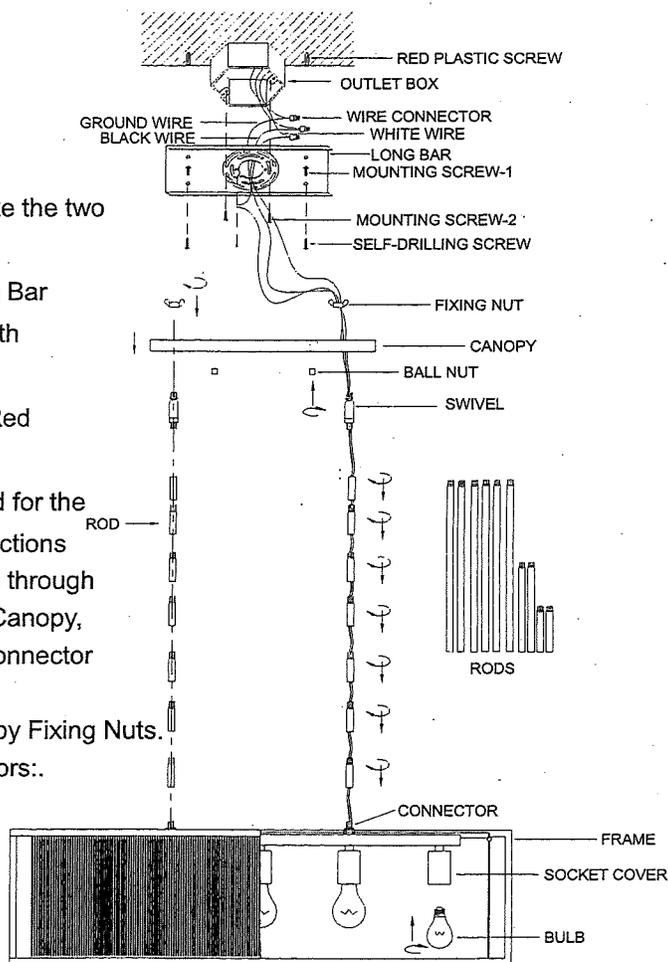

TOLTEC
—LIGHTING—