

ASSEMBLY AND INSTALLATION INSTRUCTIONS FOR ITEM

#1902-BN-CB/#1902-BN-BB/#1902-BN-SB

#1902-BRZ-CB/#1902-BRZ-BB/#1902-BRZ-SB

#1902-MB-CB/#1902-MB-BB/#1902-MB-SB


WARNING:

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Should any difficulty be experienced, please consult a qualified electrician before installing.

Installation Step

1. Turn off the electricity at the Fuse or Circuit Breaker before installation.
2. Attach the Single Bar to the Outlet Box by using 2PCS of Mounting Screws 2 upwards.
3. Decide the amount of Rods needed for the desired height and attached those rods together, run the wire from the fixture through the Rods and Swivel into the Canopy, attached one of Rod to the Nipple and the other end to the Swivel.
4. Attached Glass to the Glass Holder and secure with the Glass Holder Ring.
5. Make wire connections with Wire Connectors:
 - Connect the Black Wire from the light to the Black Wire from the Outlet Box.
 - Connect the White Wire from the light to the White Wire from the Outlet Box.
 - Attached the Ground Wire and House Ground Wire to the Mounting Bracket with a Green Screw. Carefully tuck wires back into the Outlet Box.
6. Raise up the fixture and insert the 2PCS of Short Mounting Screws 1 into the canopy and tighten with the fixing nuts.
7. Install bulb (Bulb is not included, please do not exceed the maximum capacity which is recommended on the Socket Cover.)
8. Turn on the power at Fuse or Circuit Box and enjoy your new fixture.

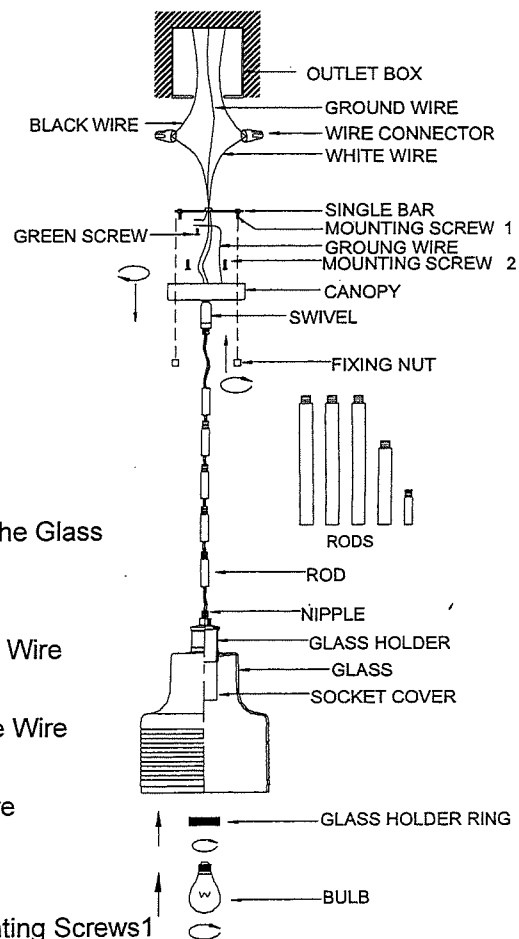

TOLTEC
LIGHTING