

ASSEMBLY AND INSTALLATION INSTRUCTIONS FOR ITEM

#81-MB/#81-BN/#81-NAB


WARNING:

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Should any difficulty be experienced, please consult a qualified electrician before installing.

Installation Step steps:

1. Turn off the electricity at the Fuse or Circuit Breaker before installation.
2. Attach the Round Bar to the Outlet Box by using 2PCS of Mounting Screws-2 upwards.
3. Decide the amount of Rods needed for the desired height and attached those rods together, weave the wire from the fixture through the Rods and Swivel into the Canopy, attached one end of Rod to the Nipple and the other end to the Swivel.
4. Remove the one of the Plastic Washer, Hexnut, Small Cover and the Nut from the Cable and attached the Glass (suitable for Glass #4570/#4572/#4550/#4552/#4560/#4562) onto the Plastic Washer through the Nipple and attached another Plastic Washer onto the glass and secure with the Hexnut by using the provided Spanner.
5. Put the Small Cover onto the Hexnut and fix with the Nut.
6. Make wire connections with Wire Connectors:
 - Connect the Black Wire from the light to the Black Wire from the Outlet Box.
 - Connect the White Wire from the light to the White Wire from the Outlet Box.
 - Attached the Ground Wire and House Ground Wire to the Mounting Bracket with a Green Screw.
 Carefully tuck wires back into the Outlet Box.
7. Raise up the fixture and insert the 2PCS of Short Mounting Screws-1 into the canopy and tighten with the Fixing nuts.
8. Install bulb (Bulb is not included, please do not exceed the maximum capacity which is recommended on the Socket Cover.)
9. Turn on the power at Fuse or Circuit Box and enjoy your new fixture.

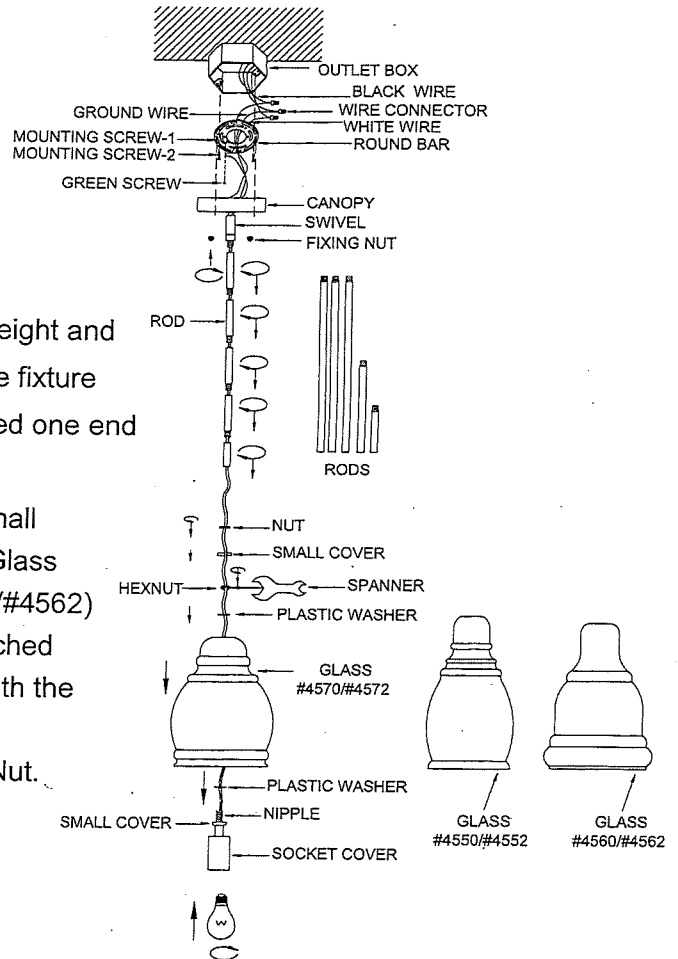

TOLTEC
-LIGHTING-